



UNS Monarch- UNS53000 Multispectral Camera

Monarch application Installation instructions

Document ID	
Version	Version 0.1
Originator	Yoed Abraham
Approval Date	February 25, 2021


History:

Version	Date	Author	Description
0.1	February 25, 2021	Yoed Abraham	First version
1.0	March 10, 2021	Avi Mendelson	Link to V1 installer

1). **System prerequisites**

- 1.1). Administrator privileges
- 1.2). OS – Windows10 (64bit)
- 1.3). Display minimum resolution: 1920 × 1080
- 1.4). Display zoom < 300%


2). **Download the SW from – [MonarchSetup](#)**

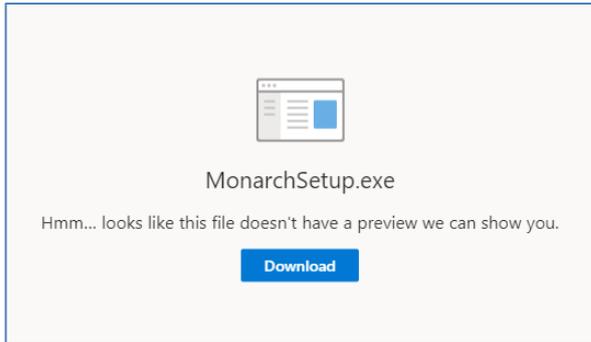


Open the file, If the below box appears - press "[More info](#)"



Then, press - "Run anyway"

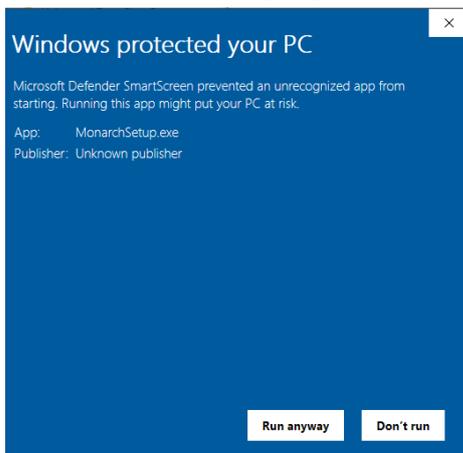


User account control – press "Yes"

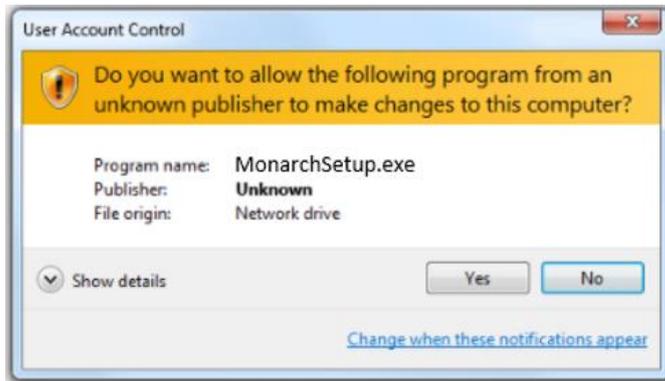

3). Follow the OS installation instructions.

3.1). Add icon to desktop.

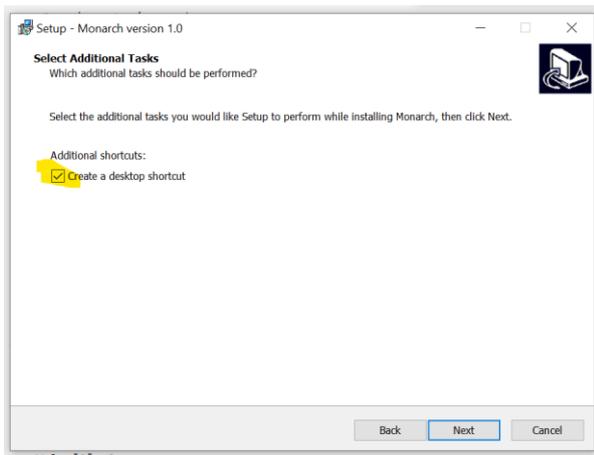

4). Once installation is completed close the GUI.

5). Connect the camera to your computer (USB 3.0 port)

6). Open GUI – double click “Monarch”



7). Turn on the camera at the upper left bottom.



8). You are ready to work. Look for a NIR source (you can use your mobile phone LED)

9). Before installation of a new version of the app, please make sure to uninstall any previous version

of it from your PC.

- 10). If you are facing app crashing, please make sure you have [Microsoft Visual C++ redistributable](#) installed on your system.