

Monarch Windows Application Installation Instructions

Document Details

Purpose	Monarch windows application installation instructions v1.39
Scope	UNS Monarch - UNS53000 Multispectral Camera UNS Monarch II - UNS54000 Multispectral Camera
Document number	UNSDOC5001
Revision number	Rev 06
Responsible Engineer	Ohad Hayoun
Date	02 January 2022
Security level	Confidential

Table of Contents

1).	System prerequisites	3
2).	Uninstall previous version	3
3).	Software installation instructions.....	3
4).	Camera activation	5
5).	User guide referance.....	5

1). **System prerequisites**

- 1.1). Administrator privileges
- 1.2). OS – **Windows10** (64bit)
- 1.3). Display minimum resolution: 1920 × 1080
- 1.4). Display zoom < 300%


2). **Uninstall any previous version**

- 2.1). Before installing the new version, please make sure to uninstall any previous version of it from your PC.


3). **Software installation instructions**

- 3.1). **Download** the SW installation file from the link below:


MonarchSetup.exe

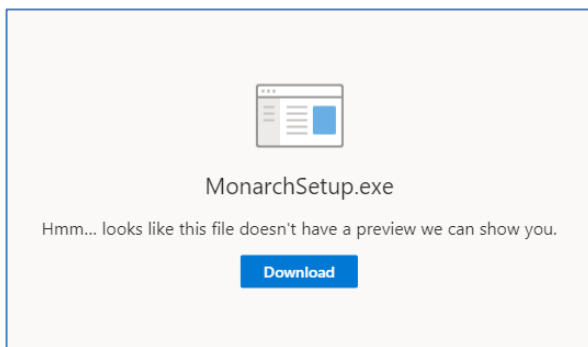


- 3.2). Open the file If the below box appears - press **"More info"**.

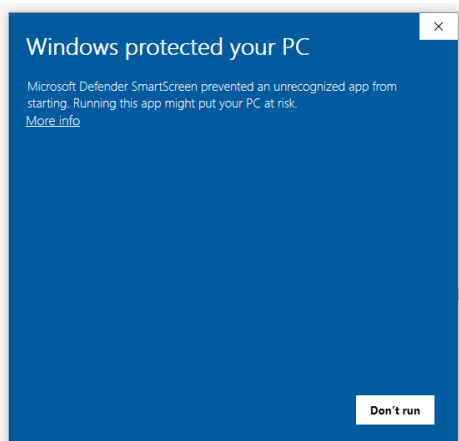


3.3). press - "Run anyway"

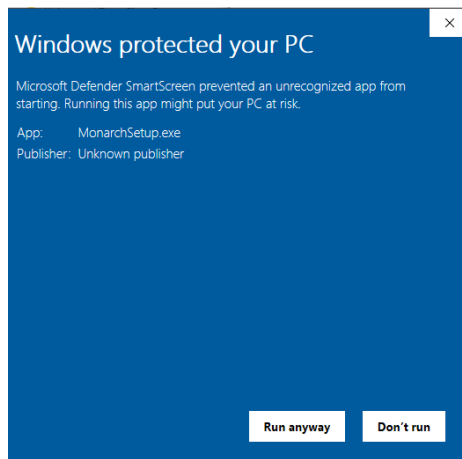

3.4). User account control – press "Yes"

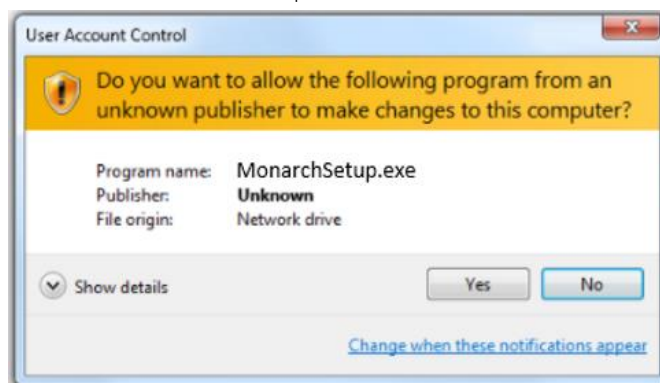

3.5). Add desktop shortcut and click next.

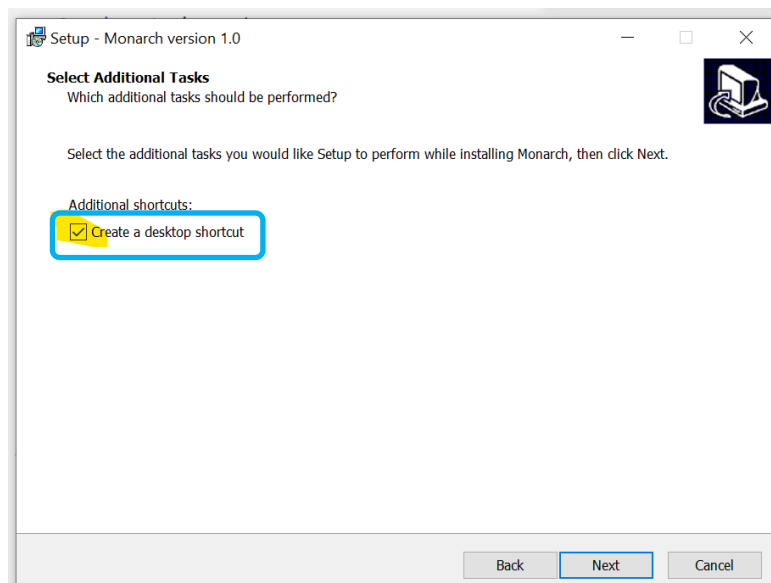

3.6). Once installation is completed close the GUI.

4). Camera activation

- 4.1). Connect the camera to your computer (USB 3.0 port).
- 4.2). Open the installed Application – “Monarch”



- 4.3). Turn on the camera at the upper left button.

Note:

If the presented image appears dark, try to use an external NIR source of light (you can use your mobile phone LED)



- 5). For further instructions please refer to the SW User guide manual.
[Monarch EVK SW_guide.pdf](#)